

Name and Function of Remote Controller Buttons

Menu Button

Activates Control Function of the LED Board

Font Button

Changes Letter Font during Input

Color Button

Changes Color of Relevant Letter during Input

Ground Button

Changes Background Color of Letter during Input

Attribute Button

Emphasizes Letters during Input

B. Space Button

Deletes Incorrectly Typed Letters or Wrong Input during Inputting Advertisement

Space Button

Inserts Space during Input

2 Line Button

Selects the Size of Input Letters, Icon, and Symbols

Korean, Digit, Capital, English Button

Sets Korean, Number, Capital English Letters, Lower Case English Letters, Spanish, etc during Text Input

Reset/Power Button

1. Screen On/Off Function
2. Resets the LED Board if Holding this Button Down for 5~7 Seconds

Symbol Button

Inserts Symbol when Adding Advertisement

Image Button

Invokes Photo / Dynamic Image when Adding Advertisement

Animation Button

Inserts Animation Icon when Adding Advertisement

Still Button

Inserts Still Icon when Adding Advertisement

Effect ▲ ▼ Button (Up/Down Directional Key)

1. Move to Other Menu Item (Moves Up / Down)
2. Views Expression Effect when Saving Advertisement
3. Minutely Adjusts Color when Changing Color of Letter

Speed ◀ ▶ Button (Left/Right Directional Key)

Returns the Cursor to the Left / Right Direction while Inputting or Slows Text Speed on the LED Board after Completing Input

OK Button

1. Save after Completing Input
2. Selects Menu Item
3. Selects Effect Type (Similar Function to "Enter" on a PC)

Cancel Button

Returns to the Previous Menu Section (Similar with "ESC" on a PC)

